

BLINDS TO GO™
DIRECT FROM OUR FACTORY

Cordless / Motorized Harmony Roman Shade Installation Guide



We make it easy!

WARNING

STRANGULATION HAZARD: Young children can be strangled by cords. Immediately remove this product if a cord longer than 22 cm or a loop exceeding 44 cm around becomes accessible.

Before starting

Your new Blinds To Go® shade is custom made to your specifications from the finest material available. The installation should be easy and your shade should fit beautifully.

Mounting options

Inside mount: Shade is mounted inside the window frame, either to the top of the frame or to the sides.

Outside mount: Shade is mounted either on or outside the window frame.


Note: Mounting screws provided are suitable for most mounting surfaces. Please see below for additional notes.

For wallboard or plaster: Use hollow wall anchors (included) for added support.


For concrete, stone, brick or tile: Use an appropriate drill bit and appropriate anchors before fastening the screws.

For metal surfaces: Pre-drill holes before fastening the screws.


Parts

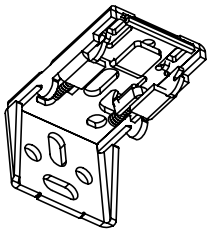


Motorized Bracket
Quantity: 2 or more
depending on width of
shade

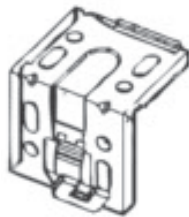

Cordless Bracket
Quantity: 2 or more
depending on width of
shade

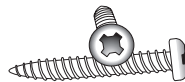


Mounting screws
Quantity: 2 per bracket

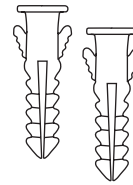

Anchors
Quantity: 2 per bracket

Optional hardware *(only provided for specific applications)*

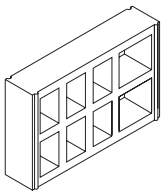

Spacer blocks
Quantity: 1 per bracket

Suggested tools

- Drill
- Level
- Pencil
- Screwdriver
- Tape measure

Getting started

Step 1. Mounting the brackets


1. Hold the shade to where you want to mount it and mark in a few inches* from each end of the headrail. This is where your brackets will go.

We recommend you use a level to ensure bracket alignment. When more than two brackets are supplied, position the additional brackets **evenly between** the two end brackets.

***Important:** Under all circumstances, the brackets **MUST** be positioned to avoid interfering with the operating components in the headrail.

2. Mount the brackets as illustrated. For **inside mount**, for the shade to be flush within the frame, the brackets should be flush with the front edge of the frame.

Note: If you have ordered spacer blocks, apply as illustrated.

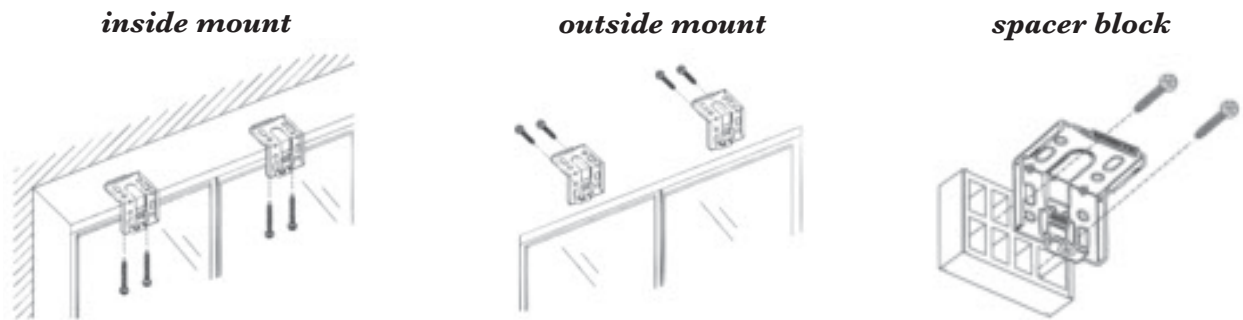

Step 2. Fitting the shade into the brackets for Cordless or Motorized


1. Insert the front of the head rail at an angle to the front lip of the bracket (Fig. A).
2. Push the head rail in and rotate the back upward so that it is flush against the bracket, engaging the back locking tab (Fig. B).

Note: To remove the shade, while pushing back on the shade to disengage the back locking tab, rotate the back of the head rail down. The shade will then release from the brackets.

Harmony Cordless Headrail




Harmony Motorized Headrail

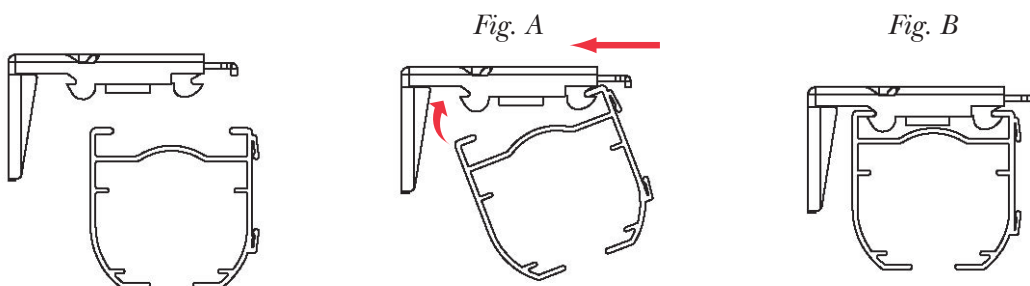

Operating your Cordless shade

1. To lower or raise the shade, hold the bottom bar with two hands.
2. While holding the bottom bar with two hands, raise or lower the shade until it reaches the desired height.
3. Cordless shade can be easily adjusted while raising or lowering if it becomes uneven.

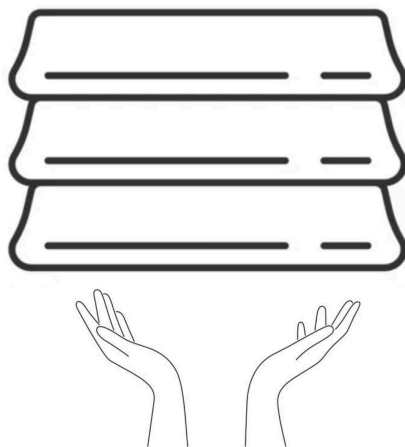

Operating your Motorized Shade - Refer to the Motorized manual